 



# Shanling UA4 Firmware Update Guide

1. ZIP file contains following three files. Please do not alter the file names in any way.

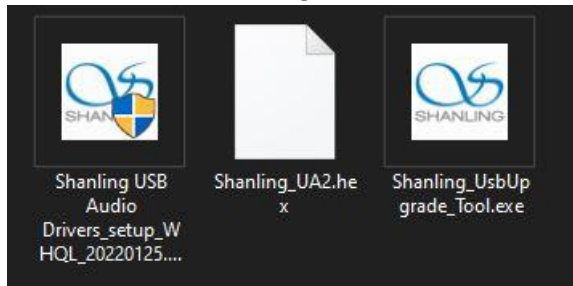


2. Open the “Shanling USB Audio Drivers\_setup” to install the latest UA4 USB Drivers. You might be asked to uninstall older drivers and restart your computer before the installation can start. You will be asked to connect the UA4 during driver installation.
3. Open the “Shanling\_UsbUpgrade\_Tool.exe”
4. Wait until the Upgrade tool app detects the UA4 and also the upgrade .hex file. When all is ready, the Upgrade tool app will show green mark.

 *If the green mark doesn't show up, please check that USB drivers are installed, the UA4 is connected and that the “Shanling\_UA4.hex” file is in the folder alongside the update tool app.*

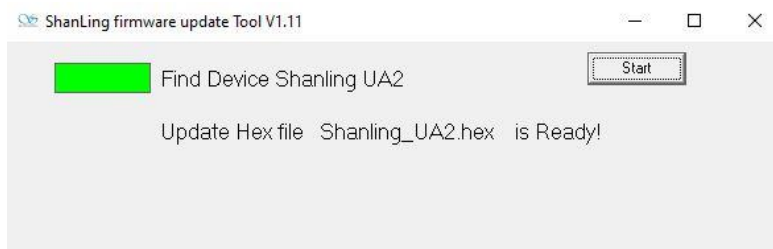

5. Click on “Start” and confirm the warning message. Wait until the update is finished.  
*Do not close the app and do not disconnect the UA4, otherwise you risk damaging the UA4.*

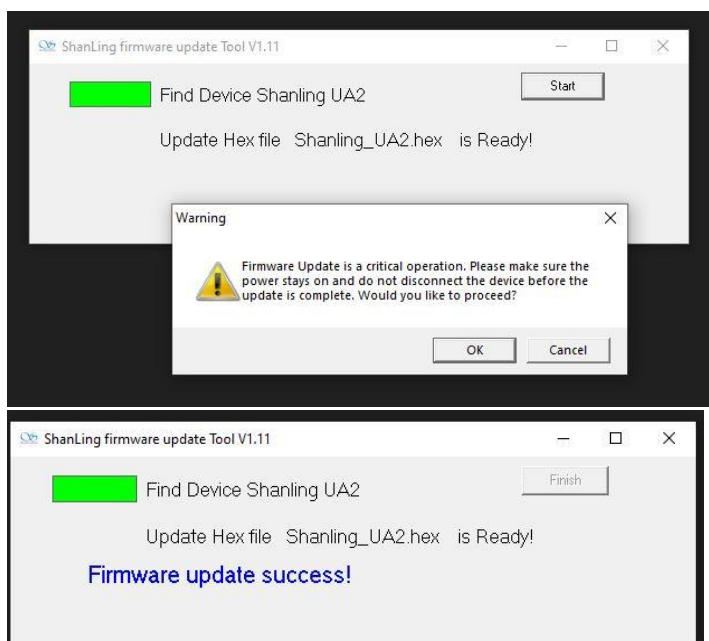

6. When finished, disconnect the UA4. Firmware Update is done.